

Long distance xiJ camera connection




Solution with active USB3-A to USB3-microB cable

Length of tested setups 9-19m

Power supply need to be placed closer to the camera.

Or respective power extension cable need to be used, if power supply is close to the host computer.

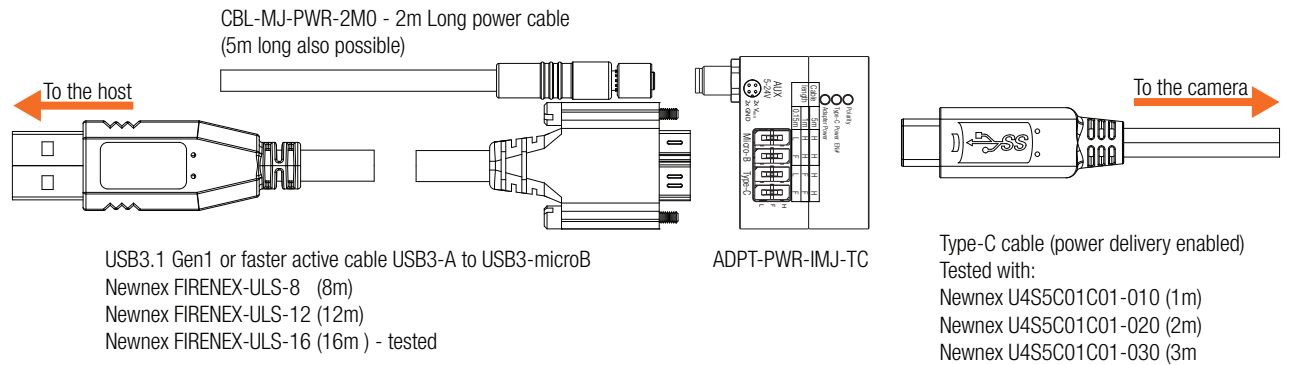


Solution with active USB3-A to USB3-A cable

Length of tested setups 16-18m

Power supply need to be placed closer to the camera.

Or respective power extension cable need to be used

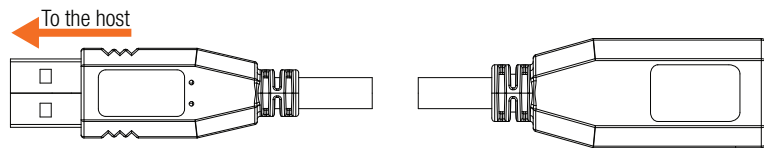

USB 3.1 Gen1 or faster extension cable

- Optical extenders
- Active extenders

Tested extenders:

- Light-Link USB Cable by Sewell, 50 ft (15m) SW-33042-50
(30m long variant also available)
- COSEMI Active Optical USB 3.2 Cable A-A MF AOC (15m) USB3.1-AA-MF-015
(5-45m long variants available)

