

# ADPT-MX-X4G3-FF-M2 Adapter board

- Ximea accessories
  - Technical Manual •
  - Version v240902 •

#### Introductions

#### About this manual

Dear customer.

Thank you for purchasing a product from XIMEA.

We hope that this manual can answer your questions, but should you have any further queries or if you wish to claim a service or warranty case, please contact your local dealer or refer to XIMEA Support on our website:

#### www.ximea.com/support

The purpose of this document is to provide a description of Ximea accessories and to describe the correct way to install related software, drivers and run it successfully. Please read this manual thoroughly before operating your new Ximea accessories for the first time. Please follow all instructions and observe the warnings.

This document is subject to change without notice.

#### About XIMEA

XIMEA is one of the worldwide leaders for innovative camera solutions with a 30-year history of research, development and production of digital image acquisition systems. Based in Slovakia, Germany and the US, with a global distributor network, XIMEA offers their cameras worldwide. In close collaboration with customers XIMEA has developed a broad spectrum of technologies and cutting-edge, highly competitive products.

XIMEA's camera centric technology portfolio comprises a broad spectrum of digital technologies, from data interfaces such as USB 2.0, USB 3.1 and PCle to cooled digital cameras with CCD, CMOS and sCMOS sensors, as well as X-ray cameras.

XIMEA has three divisions – generic machine vision and integrated vision systems, scientific imaging and OEM/custom.

Our broad portfolio of cameras includes thermally stabilized astronomy and x-ray cameras, as well as specialty cameras for medical applications, research, surveillance and defense.

#### Contact XIMEA

Support

XIMEA is a worldwide operating company

Headquarters, Sales worldwide Sales America R&D, Production

XIMEA GmbH XIMEA Corp. XIMEA s.r.o.

Am Mittelhafen 16 12600 W Colfax Ave., Suite A-130 Lesná 52
48155 Münster Lakewood, CO 80215 900 33 Marianka
Germany USA Slovakia

Tel: +49 (251) 202 408-0 Tel: +1 (303) 389-9838 Tel: +421 (2) 205 104 26 Fax: +49 (251) 202 408-99 Fax: +1 (303) 202-6350 Fax: +421 (2) 205 104 27

Web www.ximea.com
General inquiries info@ximea.com
Sales sales@ximea.com

XIMEA Support

### Contents

|     | About this manual   |    |
|-----|---|----|
|     | About XIMEA   |    |
|     | Contact XIMEA   | 2  |
| 1   | General description   | 4  |
| 2   | Dimensional drawings  | 5  |
| 3   | Connectors  |    |
|     | 3.1 Location of connectors                                  | 6  |
|     | 3.2 HEADER 1x2 Polarized                                    |    |
|     | 3.3 BM02B   |    |
|     | 3.4 BM03B / GPI0  |    |
| 4   | Quickstart guide       4.1         Hardware setup       4.1 | 8  |
|     | 4.1 Hardware setup  | 8  |
|     | 4.1.1 Essential components                                  | 8  |
|     | 4.1.2 Connecting the components                             | 8  |
|     | t of figures  |    |
| Lis | t of tables   | 10 |

# 1 General description

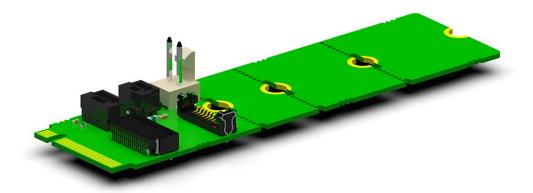


Figure 1: isometric view of the adapter

A PCle M.2 adapter designed for X4 Gen. 3 with a FireFly connector supports copper cables. This adapter facilitates the connection of a xiX X4 FireFly camera (X4G2 or X4G3 target) with a FireFly connector to an M.2 slot on a host system. Additionally, the adapter can be shortened by removing specific sections of the board.

# 2 Dimensional drawings

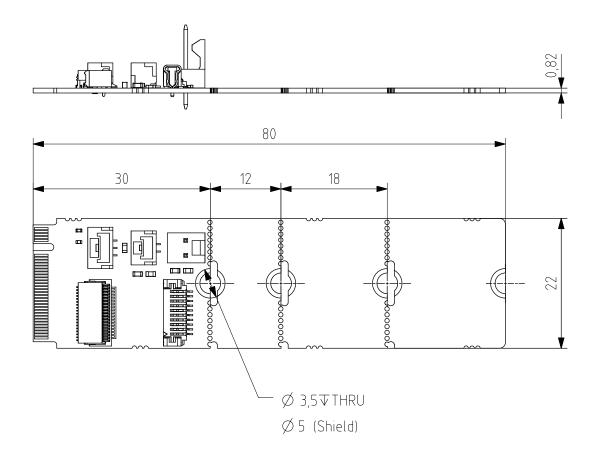


Figure 2: dimensional drawing

| Width [ W ] | Height [ H ] | Depth [ D ] | Mass [ M ] | Material and technology |
|-------------|--------------|-------------|------------|-------------------------|
| 22 mm       | 0.82 mm      | 30 to 80 mm | TBD        | FR4                     |

Table 1: parameters

## **3** Connectors

### 3.1 Location of connectors

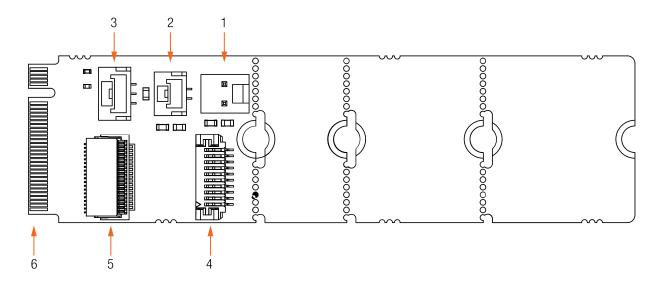


Figure 3: location connectors

| connector                    |
|------------------------------|
| Power - HEADER 1x2 Polarized |
| Power - BM02B                |
| 10 - BM03B                   |
| Samtec UCC8-010-1-H-S-1-A    |
| Samtec UEC5-019-1-H-D-RA-1-A |
| M.2                          |
|                              |

Table 2: connectors location

| Pin | Signal | Description   |
|-----|--------|---------------|
| 1   | VCC_IN | Power         |
| 2   | GND    | Ground return |

Table 3: HEADER 1x2 Polarized pin assignment

#### 3.3 BM02B

| Pin | Signal | Description   |  |
|-----|--------|---------------|--|
| 1   | VCC_IN | Power         |  |
| 2   | GND    | Ground return |  |

Table 4: BM02B pin assignment

### 3.4 BM03B / GPI0

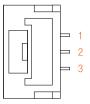


Figure 4: GPIO pin assigment

| Pin | Signal  | Description                                   |
|-----|---------|---|
| 1   | ISO_GPI | Opto-isolated input 1                         |
| 2   | ISO_GPO | Opto-isolated output 1                        |
| 3   | ISO_GND | (common) Isolated Ground for the IO subsystem |

Table 5: BM03B pin assignment

### 4 Quickstart guide

### 4.1 Hardware setup

#### 4.1.1 Essential components

- Host PC with M.2 PCle slot (Spread Spectrum Clock operation needs to be disabled)
- Any ECUE cable (e.g. CBL-ECUE-12-015-T1-FF-011)
- Any xiX camera equipped with FireFly connector

#### 4.1.2 Connecting the components

- Step 1. Deploy the host adapter to the turned-off PC and ensure the PC is also unplugged from the power source
- Step 2. Connect an FF cable to the FF port on the adapter
- Step 3. Connect an FF cable to the turned-off camera
- Step 4. Power up the connected device
- Step 5. Power up the PC

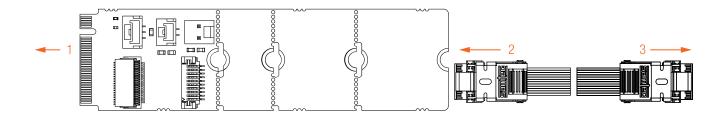


Figure 5: connecting steps

For more information about ADPT-MX-X4G3-FF-M2 please contact: sales@ximea.com.

# List of Figures

| $\sigma$                |  |
|-------------------------|--|
| $\odot$                 |  |
|                         |  |
|                         |  |
| $\overline{\mathbf{x}}$ |  |
|                         |  |
|                         |  |

| 1 | isometric view of the adapter | 2 |
|---|-------------------------------|---|
|   | dimensional drawing           |   |
|   | location connectors           |   |
| 4 | GPIO pin assigment            | 7 |
| 5 | connecting steps              | ۶ |

## List of Tables

| $\alpha$ |
|----------|
| $\Theta$ |
| $\Box$   |
| $\equiv$ |
| ~        |
|          |

| 1 | parameters                          | Ę |
|---|-------------------------------------|---|
|   | connectors location                 |   |
|   | HEADER 1x2 Polarized pin assignment |   |
|   | BM02B pin assignment                |   |
|   | BM03B pin assignment                |   |